


# HOW TO SILENCE YOUR SMOKE ALARM

## TROUBLESHOOTING


### ALARM TYPE 1 240V HARDWIRED

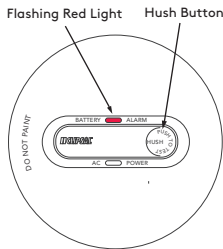

**1A** Identify triggered alarm to enable the network to be silenced. You must locate the alarm with the flashing red light.


**1B** Silence the network by pushing the 'Hush' button for 3 secs on the red light flashing alarm.

**2A** Press the side latch button on the triggered alarm to disconnect the alarm to the unit (leave hanging).

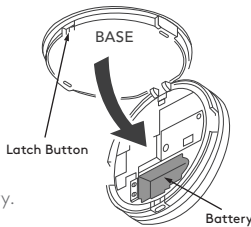

**2B** Remove the 9V battery.

**3** Drain the internal battery by pushing the 'Hush' button for 3 secs whilst the alarm is detached and hanging.  
(Alarm must remain hanging to avoid reconnecting to the main power and retriggering).

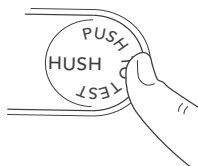


**Tip:** Listen for a dying robot sound ... 

### ALARM TYPE 2 WIRELESS LITHIUM

**1A** Identify triggered alarm to enable the network to be silenced. You must locate the alarm with the flashing red light.



**1B** Silence the network by pushing the 'Hush' button for 3 secs on the red light flashing alarm.

**Note:** It can take 5-10 secs for the network to be silenced.

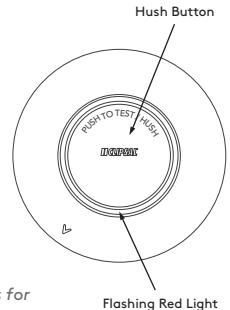

**2** Disconnect the triggered alarm by giving it a 1/4 turn anti-clockwise to detach from the ceiling bracket.

**Note:** Some models may require a flat screwdriver to press and hold a locking clip upwards while turning.

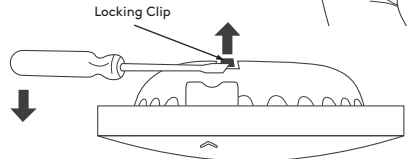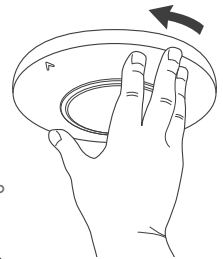

**Service Call Required** - ensure the triggered alarm is then reported via SMS to PCA on **0447 877 012**

Please include a photo of the alarm, specify the location of the alarm and provide your home address as we may be required to attend for warranty and compliance purposes.